

CABOOSE BIRDHOUSE



— CEDAR WOOD PLAN —


Handcrafted charm for your feathered friends.



PARTS LIST – CEDAR



Cap 7 1/2" x 5 1/2" (1)

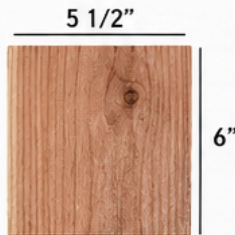

Roof Section (2)



End Piece (2)



Sides 10" x 5 1/2" (2)



Floor 15" x 4 3/8" (1)



3/8" x 3/8" for Deck Railing



Axles and Wheels 2 1/4" x 1"
(4 axles – 8 wheels)



Chassis 17" x 3 1/2" (1)



Chassis with Axles & Wheels (Painted & Assembled)

HARDWARE & SUPPLIES

- Wood glue
- 1 1/4" brad nails or exterior screws
- Sandpaper (120 & 220 grit)
- Exterior wood finish (linseed oil, spar urethane, etc.)
- Birdhouse hook or eye screw

ASSEMBLY OVERVIEW

- 1 Attach sides to floor and end pieces to form the body.
- 2 Attach the roof sections to the top.
- 3 Attach the cap to the center top.
- 4 Install the chassis underneath.
- 5 Add axles and wheels.
- 6 Install railing pieces around the porches.
- 7 Sand all edges smooth and apply a protective finish.

NOTES



- All pieces are made from cedar for natural weather resistance.
- Pre-drill holes to prevent splitting.
- Seal all surfaces for long-lasting durability.



ProCraftinator
WOOD CRAFTS

HANDCRAFTED WITH CARE.
BUILT TO LAST.

www.procraftinator.net